


# 知吾煮智能电饭煲1.6L使用说明书


**zhiwuzhu Smart Rice Cooker 1.6L**
**Operation Manual**


使用产品前请仔细阅读本说明书，并妥善保管

Please read this instruction carefully before starting the product,
and save it for future use.

感谢选择使用知吾煮智能电饭煲1.6L。本产品仅限于家庭使用。
说明书中的产品、配件、用户界面等插图均为示意图，仅供参考。
由于产品的更新与升级，产品实物与示意图可能略有差异，请以实物为准。

## 产品介绍

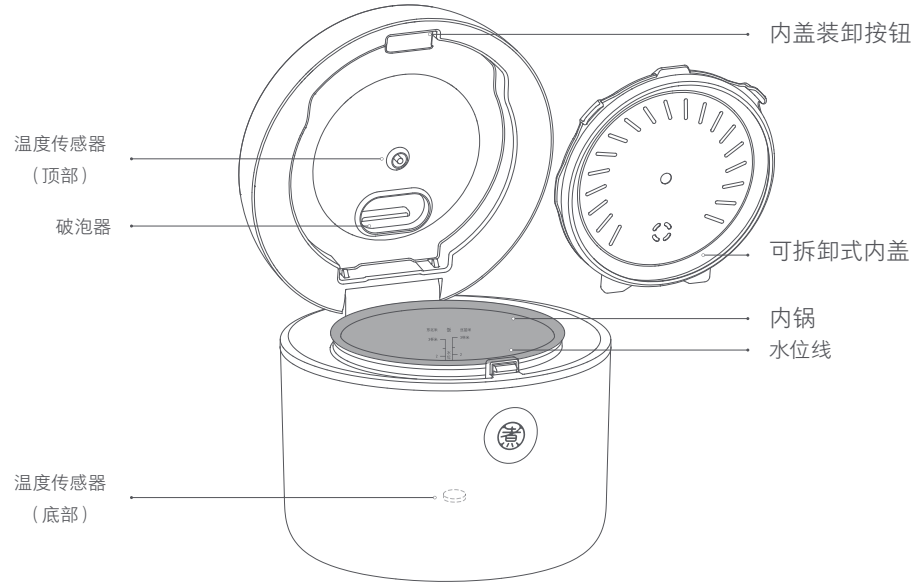

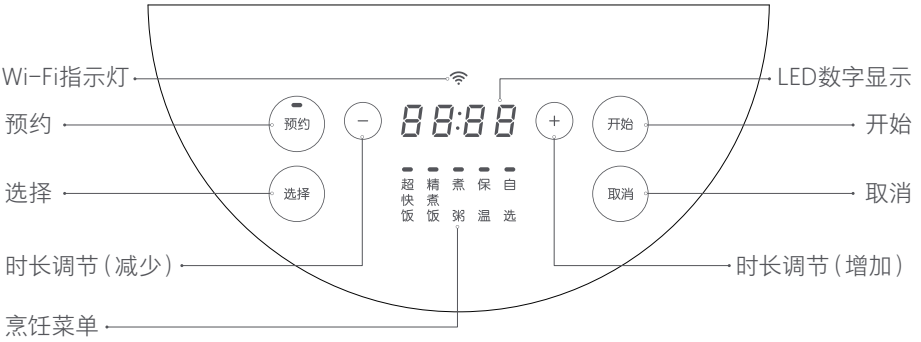
## 配件清单图示



饭勺 × 1





量杯 × 1



电源线 × 1

## 使用

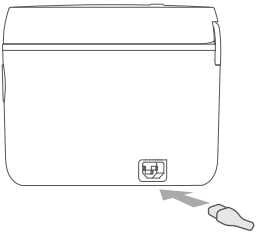

1. 开机
   将电源线连接至主机底部的电源接口，然后将电源线另一端插入交流电插座，接通电源后，屏幕点亮即开机。

2. 关机
   烹饪完成后，拔下电源插头即可关机。

## 连接知吾煮APP

在安卓应用商店或者 Apple App Store 搜索“知吾煮”或者扫描右方二维码下载“知吾煮 ”APP。
打开APP，在“厨房”模块添加“知吾煮智能电饭煲1.6L”，添加成功后可以使用APP操控该设备。

提示：由于知吾煮APP的升级与更新，实际操作可能与以上描述略有差异，请按照当前知吾煮APP内指引进行操作。

## 连接米家APP

本产品已接入米家，可通过米家APP操控，并与其他产品互联互通。扫描二维码，下载并安装米家APP，已安装米家APP的用户将直接进入设备连接页。或在应用商店搜索“米家”，下载并安装米家APP。打开米家APP首页，在页面右上角点击“+”，根据APP提示方式添加设备。

提示：由于米家APP的升级与更新，实际操作可能与以上描述略有差异，请按照当前米家APP内指引进行操作。

## Wi-Fi连接

首次开机Wi-Fi灯闪烁，用知吾煮APP搜索设备，即可连接。连接后Wi-Fi灯长亮，熄屏状态时熄灭。




## 重置Wi-Fi

同时按下“选择”和“取消”键，可重置Wi-Fi。屏幕显示跑马灯动画，重置成功后，Wi-Fi图标闪烁，电饭煲进入等待连接状态。



## 开始煮饭

1. 开盖

按开盖按钮打开上盖。

提示：如需取出内锅，请轻推上盖使其充分打开。取出内锅时，请避免碰撞到内盖。




2. 放米放水

以煮2杯东北米为例，加水至相应刻度2。加水时不能超过相应水位刻度线，否则可能引起溢锅、短路等故障。




2杯米约2人份



3. 设置菜单

电饭煲通电后，按“选择”键，选择“超快饭”、“精煮饭”或“煮粥”等模式。




4. 开始煮饭

按“开始”键进入烹饪状态。

**警告：**“超快饭”和“精煮饭”挡仅适用于米饭，用于其他烹饪将可能导致烫伤及损害产品性能。




## 操作指引

菜单切换

按下“选择”键，选择想使用的烹饪模式。每按一次，菜单便按“超快饭”、“精煮饭”、“煮粥”、“保温”、“自选”顺序依次切换。




1. 超快饭

开机默认“超快饭”模式，烹饪时长根据不同米量程序自动进行调整（1杯米预计时长约28分钟，2杯米预计时长约35分钟，3杯米预计时长约40分钟）。




2. 精煮饭

烹饪时长根据不同米量程序自动进行调整（预计时长约1小时）。




3. 煮粥

默认时长1小时30分钟。

提示：可通过知吾煮APP和按“−”“+”调节烹饪时长，调节范围40分钟—4小时。



4. 保温

烹饪完成后，电饭煲自动进入保温模式，保温温度维持在73℃左右。可手动选择保温模式。




提示1: 建议保温时间不超过12小时。超过24 小时，自动取消保温进入待机模式；

提示2: 可通过知吾煮APP设置烹饪完成是否保温；

提示3: 在知吾煮APP中选择的部分不适宜保温的模式（如: 蛋糕），在烹饪完成后不会自动进入保温模式。

5. 自选

APP中推荐有多种美食制作模式，可利用APP设定其中一种作为自选功能进行烹饪。




提示1: 产品出厂时自选挡默认为炖煮功能，可在APP中对自选功能进行替换编辑。

提示2: APP中含有蛋糕等烹饪功能。

6. 预约

1) 选择好烹饪模式后（选择“精煮饭”为例），按“预约”键设置预约完成时间。例如：预计两小时后开饭，则需将预约时间设置为02：00。




提示: 当前时间到预约完成时间比烹饪周期时间要长，才能预约成功。否则会立即开始烹饪。




2) 预约初始界面显示所选模式的烹饪所需时长。
初始状态为“时”闪烁，每按一下“时间调节+/-”键，预约时长增加1小时或减少1小时；再按“预约”键后切换为“分”闪烁，每按一下“时间调节+/-”键，预约时长增加10分钟或减少10分钟。确认预约时间后，按“开始”键开始预约烹饪。




## 故障代码

| 代码 | 故障描述 | 备注 |
|---|---|---|
| E-09 | 顶部传感器损坏 | 请联系售后服务进行维修 |
| E-10 | 底部传感器损坏 | 请联系售后服务进行维修 |
| E-11 | 通讯故障 | 请联系售后服务进行维修 |

## 故障排除

| 故障类型 | 故障判断及解决 |
| --- | --- |
| 上盖无法合上 | 请检查内盖是否安装 |
| 按键无反应 | 电饭煲是否在烹饪、预约或保温模式<br>按“取消”键退出 |
| 煮饭漏气 | 上盖各硅胶密封件是否有老化、变形或破损漏气 |
| 煮饭夹生<br>（未煮熟） | 米水比是否按要求刻度匹配（水偏少）<br>米的生产日期是否超过六个月<br>内锅锅底、传感器配合的顶面是否有异物<br>锅底传感器铝盖表面是否变形 |
| 煮饭煮粥溢出 | 内锅锅底是否变形<br>米水比是否按要求刻度匹配（水偏多）<br>内锅锅底、传感器配合的顶面是否有异物<br>锅底传感器铝盖表面是否变形 |
| 煮饭呈块状烂饭 | 内锅锅底是否变形<br>米水比是否按要求刻度匹配（水偏多）<br>保温时间是否超过12小时 |
| 煮饭过程有异味 | 内盖组件是否残留上次烹饪的食物和积水<br>内盖密封圈是否有异味<br>首次使用产品前，请使用“超快饭”模式煮清水2至3次，每次28分钟，可有效减少异味。 |
| 煮饭底部焦黄 | 米是否淘干净<br>内锅锅底、传感器配合的顶面是否有异物<br>锅底传感器铝盖表面是否变形<br>内锅锅底是否变形 |
| 保温变硬或<br>异味 | 保温时间是否超过12小时<br>内锅锅底、传感器配合的顶面是否有异物<br>锅底传感器铝盖表面是否变形<br>内锅锅底是否变形 |
| 预约功能不能<br>按要求进行 | 当前时间到预约完成时间比烹饪周期时间是否要短<br>设置完预约时间后，是否未按“开始”键 |
| Wi-Fi连不上 | 用户APP版本是否为最新<br>电饭煲位置Wi-Fi强度是否足够 |
| 无法更新固件 | 是否处于煮饭过程中<br>Wi-Fi是否正常 |

## 注意事项

使用限制
- 产品正常工作海拔范围高度为0米~2000米。
- 产品不应放在不平衡、潮湿或者靠近其他火源、热源（如炉具）的地方，距离最好是30cm以上。
- 请勿使用非专用内锅或变形后的内锅，以免因过热导致烫伤或受伤。

清洁保养时
- 器具不得浸入水中或淋水。
- 请勿使用钢丝球等硬质物品清洗或擦洗内锅。
- 请使用软布进行清洗。

交流电源线
- 请仅使用配套提供的交流电源线。
- 在进行维护作业或移动之前，请从交流电源插座上断开交流电源线的连接。
- 如果电源软线损坏，必须用专用软线或从其制造商或维修部买到的专用组件来更换。
- 请勿过度拧捏、弯曲或扭转交流电源线，否则线芯可能会暴露在外或折断。
- 请勿在任何其他装置上使用所提供的交流电源线。

电源注意事项
- 禁止使用交流220V以外的电源，以免造成火灾触电。
- 断开交流电源线连接时，务必手持电源插头部分拔下电源。请勿拉扯交流电源线，以免造成触电或短路起火。
- 请勿让儿童单独操作使用，要放在婴幼儿不能触及的地方，以避免触电、烫伤等危险事故发生。
- 请不要用潮湿的手插入或拔出电源插头，以免造成触电或受伤。
- 请单独使用额定电流10A以上的带接地线插座，以免引起火灾等危险。

关于环境
- 因蒸汽和热量会导致墙壁及家具受损、变色、变形，因此使用时请距离墙壁和家具30cm以上。
- 放入厨房壁柜等地方使用时，应注意保持通风。

使用中
- 请勿将内锅放置到其他热源上加热（如电磁炉、燃气炉）。
- 请勿在排气孔或缝隙间插入任何物件，以免触电或受伤。
- 使用中或刚使用结束，请勿用手直接接触内锅，以免高温烫伤。
- 使用中或刚使用结束，切勿将身体靠近蒸汽口处，特别要注意不要让婴幼儿靠近，以免导致烫伤。
- 产品工作中，请勿移动或晃动。
- 切勿用此煲做可能引起排气孔堵塞的食物（如紫菜、海带等片状食物）。
- 严禁使用时用其他物品覆盖电饭煲顶盖，以免蒸汽无法释放。
- 如果保温时间超过24小时，米饭会出现异味。

使用结束
- 不使用时，切记关闭电源并拔下电源插头。
- 必须对蒸汽排出管道做定期检查，以确保其不被堵塞。
- 如产品发生异常或故障时，请立即停止使用，并拔掉电源插头。需等到冷却后才能开盖取出内锅。

其他注意事项
- 请不要摔落本产品或碰撞坚硬物，以免造成受伤或故障。
- 请勿在内盖结构损坏的情况下使用，以免因蒸汽、煮沸泄漏造成烫伤或受伤。
- 请勿改造。非维修技术人员，不可拆卸修理，以免造成火灾、触电及受伤。
- 发生异常或故障时，立即停止使用，以免造成火灾、触电及受伤。
- 器具不能在外接控制器或独立的遥控控制的系统下运行。
- 产品上的硅胶件避免与乙醇含量大于50%的酒精饮料接触。

异常或故障
- 使用中电源线、电源插头异常发热。
- 电饭煲中有烟雾冒出、有烧焦的异味。
- 电饭煲某部分发生裂开、松动或有异响。
- 内锅变形。
- 以及其他的异常或故障。

## 基本参数


| | | | | | |
|---|---|---|---|---|---|
| 产品名称 | 电饭煲 | 产品型号 | ZCDQ060 | 额定电压 | 220V~ |
| 容　　量 | 1.6L | 额定功率 | 350W | 额定频率 | 50Hz |
| 内锅材质 | 铝合金 | 能效等级 | 3级 | 加热方式 | 电热盘加热 |
| 产品尺寸 | 227 × 227 × 194mm | | | | |
| 无线连接 | Wi-Fi IEEE 802.11b/g/n 2.4GHz<br>本设备包含型号核准代码为：CMIIT ID:2017DP6053 的无线电发射模块 | | | | |

## 产品中有害物质的名称及含量

| 部件名称 | 有害物质 | | | | | |
|---|---|---|---|---|---|---|
| | 铅<br>( Pb ) | 汞<br>( Hg ) | 镉<br>( Cd ) | 六价铬<br>(Cr(VI)) | 多溴联苯<br>( PBB ) | 多溴二苯醚<br>( PBDE ) |
| 硅胶部件 | ○ | ○ | ○ | ○ | ○ | ○ |
| 塑料部件 | ○ | ○ | ○ | ○ | ○ | ○ |
| 五金部件 | ○ | ○ | ○ | ○ | ○ | ○ |
| 电气部件 | × | ○ | × | ○ | ○ | ○ |
| 附属品类 | ○ | ○ | ○ | ○ | ○ | ○ |

本表格依据SJ/T 11364的规定编制。
○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

## 电气图

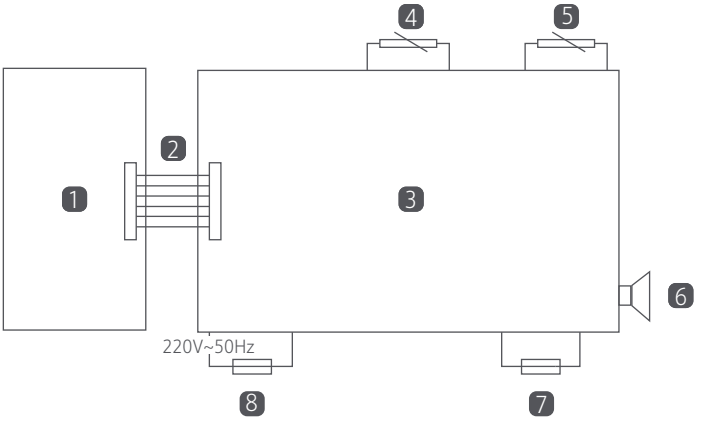


1 主控电路板　2 连接排线　3 电源板　4 底部温度传感器
5 顶部温度传感器　6 蜂鸣器　7 温度保险丝　8 电流保险丝

食品接触用 知吾煮智能电饭煲1.6L产品信息
本产品适用于接触食品，请根据说明书要求正常使用本产品。
本产品食品接触用材料及部件符合GB 4806.1-2016和相应食品安全国家标准要求，具体信息如下：

| 食品接触用材料 | | 用途 | 执行标准 | 备注 |
|---|---|---|---|---|
| 金属 | 不锈钢 06Cr19Ni10(SUS 304) | 传感器外壳 | GB 4806.9-2016 | / |
| | 铝合金 | 内盖、内锅（锅胚） | | |
| 涂层 | 聚四氟乙烯 | 内锅涂层 | GB 4806.10-2016 | 如涂层脱落，建议更换内锅。请勿干烧。 |
| 塑料 | PP | 饭勺、量杯、面盖、上盖内衬 | GB 4806.7-2016 | / |
| 硅胶 | | 内盖密封圈、破泡器密封圈、上盖传感器密封圈 | GB 4806.11-2016 | / |
| 铝合金（wt.%):Si≤0.6，Fe≤0.7，Cu≤0.3，Mn≤1.5，Mg≤0.9，Zn≤0.15, Cr≤0.1，其他单个≤0.05，其他合计≤0.15，Al:余量 | | | | |

## 保修说明

知吾煮智能电饭煲1.6L产品售后服务严格依据《中华人民共和国消费者权益保护法》、《中华人民共和国产品质量法》实行售后三包服务，服务内容如下：

一、保修期限

1. 自您签收次日起7日内，本产品出现《知吾煮智能电饭煲1.6L产品性能故障表》所列性能故障的情况，经由知吾煮售后服务中心检测确定，可免费享受退货或换货服务；
2. 自您签收次日起8日-15日内，本产品出现《知吾煮智能电饭煲1.6L产品性能故障表》所列性能故障的情况，经由知吾煮售后服务中心检测确定，可免费享受换货或者维修服务；
3. 自您签收次日起12个月内，本产品出现《知吾煮智能电饭煲1.6L产品性能故障表》所列性能故障的情况，经由知吾煮售后服务中心检测确定，可免费享受维修服务。

二、保修内容

| 类型 | 保修内容 | 保修时间 |
|---|---|---|
| 主机 | 机器本身的零件（不含内胆） | 1年 |
| 附件 | 电源线、内胆、内盖组件 | 1年 |

提示：量杯、饭勺为产品随机耗材，无保修期。

三、非保修条例

1. 未经授权的维修、误用、碰撞、疏忽、滥用、进液、事故、改动、不正确的使用非本产品配件，或撕毁、涂改标贴、防伪标记；
2. 已超过三包有效期；
3. 因不可抗力造成的损坏；
4. 不符合《知吾煮智能电饭煲1.6L产品性能故障表》所列性能故障的情况；
5. 因人为原因导致本产品及其配件产生《知吾煮智能电饭煲1.6L产品性能故障表》所列性能故障。

四、知吾煮智能电饭煲1.6L产品性能故障表

| 名称 | 性能故障 |
| --- | --- |
| 知吾煮智能电饭煲1.6L | 通电后指示灯不亮<br>指示灯亮但不工作<br>使用过程不加热<br>按键无反应<br>开合盖异常<br>产品锅边漏气<br>出现无法恢复的故障代码 |

五、提示

1. 因运输过程中需使用包装箱保证产品运输安全，建议您自签收之日起至少保留包装箱30天；
2. 本产品仅限中国地区（不含港澳台地区）销售，故本产品仅在中国地区（不含港澳台地区）提供售后服务，本保修条例仅适用于中国地区（不含港澳台地区）。

## 产品保修卡

用户姓名 .....

通讯地址 .....

联系电话 .....

产品名称及型号 .....

产品序列号 .....

产品购买日期 .....

## Important Safeguards

**Service Restrictions**

- The normal working altitude of the product ranges from 0 m to 2,000 m.
- The product should not be placed in an unbalanced or humid place or one close to a fire or heat source (such as a stove), but preferably at a distance of more than 30cm from them.
- Do not use any non-specific or deformed inner pot to avoid burns or injuries due to overheating.
- This appliances is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**Cleaning and Maintenance**

- Do not immerse any part of the rice cooker in water or spray water on any part of the rice cooker .
- Do not use steel wool or other hard items to clean or scrub the inner pot.
- Use soft cloth to clean the product.

**AC Power Cord**

- Only use the supporting AC power cord.
- Disconnect the AC power cord from the AC power socket before maintenance or moving.
- If the power cord is damaged, replace it with specific power cord or original one purchased from the manufacturer or maintenance department.
- Do not over-pinch, bend, or twist the AC power cord, or its core may be exposed or broken.
- Do not use the supplied AC power cord on any other device.

**Precautions on Electric Power**

- It is prohibited to adopt power supplies other than 220V, to avoid electric shock or fire disaster.
- Be sure to disconnect the power cord by holding the plug firmly with your hand to avoid electric shock or fire caused by short circuit.
- Do not pull the AC power cord excessively to avoid electric shock or fire caused by short circuit.
- Do not allow children to operate the rice cooker alone. Keep it out of reach of infants and young children to avoid the occurrence of electric shock, scald, and other accidents.
- Do not insert or pull out the power plug with wet hands to avoid electric shock or injury.
- Use an independent power socket with its ground wire and at a rated current above 10A to avoid fire hazard and other accidents.

**Environment**

- Steam and heat will cause damage, discoloration and deformation to walls and furniture, so please keep the rice cooker more than 30cm away from walls and furniture during use.
- When operating the rice cooker in a kitchen cabinet or other similar places, please ensure s ufficient ventilation.

**In Use**

- Do not heat the inner pot on any other heat sources such as induction cooker and gas stove.
- Do not insert anything into the stream outlet or gap to avoid electric shock or injury.
- Do not touch the inner pot during use or immediately after use of the rice cooker, to avoid scald due to high temperature.
- Do not be close to the steam outlet during use or immediately after use of the cooker.
- Do not move or shake the rice cooker while it is cooking.
- Do not use this rice cooker for food materials which may cause blockage of the stream outlet, such as seaweed and kelp.
- Do not cover the top of the rice cooker with other items, to avoid steam against from releasing.
- Cooked rice may have bad smell if the temperature holding time exceeds 24h.
- Do not add ingredients to the pot beyond the water level to avoid leakage of liquid to the connector.

**After Use**

- Be sure to power off and disconnect the power plug when the rice cooker is not used.
- Be sure to check the steam discharge pipe regularly to ensure that it is not clogged.
- If the rice cooker is abnormal or there is a fault, stop using it immediately and disconnect the power plug. Open the lid and take out the inner pot until the rice cooker cools sufficiently.

**Other Precautions**


- Please do not drop the product or bump it against hard objects, to avoid injury or faults.
- Do not use the product when the structure of its inner lid is damaged, to avoid scald or injury caused by leaked steam or boiling liquid.
- Do not modify the product. Non-maintenance technicians shall not disassemble or repair the product to avoid fire, electric shock, or injury.
- If the product is abnormal or there is a fault, stop using it immediately to avoid fire, electric shock or injury.
- Do not operate the product through an external controller or an independent remote control system.
- The silicone parts on the product should avoid contact with alcoholic beverages containing more than 50% ethanol.


Abnormality or Fault

- Abnormal heating of the power cord or power plug in use.
- Smoke and a burning smell come out of the rice cooker.
- Part of the rice cooker cracks, looses or there is an abnormal noise.
- The inner pot is deformed.
- Other faults and abnormalities.

Thank you for your purchasing and using zhiwuzhu Smart Rice Cooker 1.6L. This product is for home use ONLY. The illustrations of product, components and user interface herein are all schematic diagrams for reference only. Due to possible upgrades of the product, there may be differences between the actual product and the schematic diagram included herein.

**Product Description**

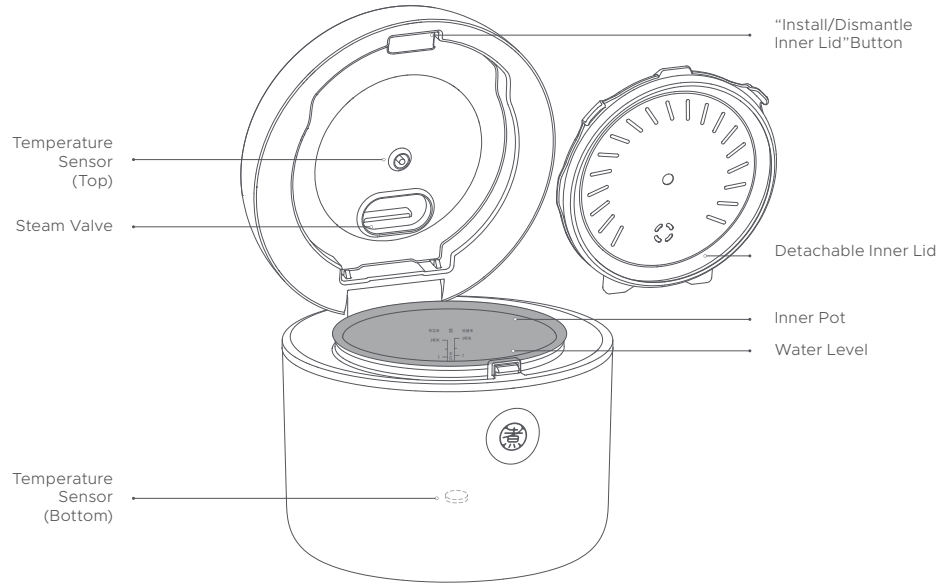

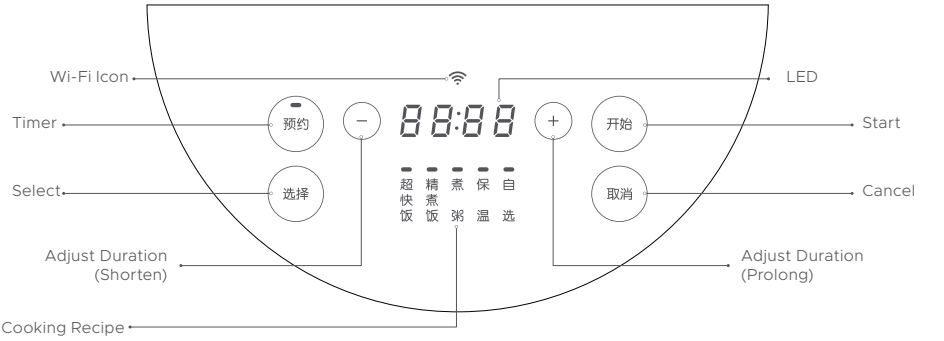
## Accessories



Rice Scoop ×1





Measuring Cup ×1



Power Cord ×1

## Start to Use

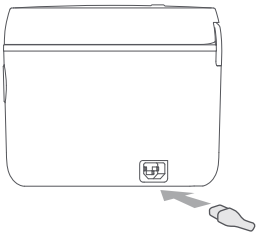

1. Turn On

Connect one end of the power cord to the power socket at the bottom of the main frame, and then the other end (power plug) to the AC power socket. After the power is turned on, the screen lights and the product is powered on.

2. Turn Off

After cooking is completed, disconnect the power cord to power off the product.

## Connect with Mijia App

This product works with Mijia app. Control your device, and interact it and other smart home devices with Mijia app.

Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search "Mijia" in the app Store to download and install it.

Open Mijia app, tap "+" on the upper right, and then follow prompts to add your device.

Note: The version of Mijia app might have been updated, please follow the instructions based on the current app version.

## Wi-Fi Connection




The Wi–Fi icon blinks when the product is powered on for the first time. Search a device with zhiwuzhu APP and then you may link zhiwuzhu Smart Rice Cooker 1.6L to zhiwuzhu APP. After linkage, the Wi–Fi icon is on constantly and goes off when the screen turns off.

## Reset Wi-Fi




Simultaneously press down the pushbuttons "Select" and "Cancel" and then reset Wi–Fi. The screen displays a scrolling tool for resetting Wi–Fi settings. After a successful reset, the Wi–Fi icon blinks on the screen to indicate the product enters the Waiting state to enable Wi–Fi connection.

## Start to Cook Rice




1. Open the lid

Press down the pushbutton "Open Lid".

Note: To take out the inner pot, gently push the lid to open it fully. Avoid touching the inner lid when taking out the inner pot.

2. Put in rice and water

Put in 2 cups of Japonica Rice and add water to the water level line "2", for example. When adding water, do not exceed the corresponding water level line; otherwise, overflow, short circuit or other fault may be caused.

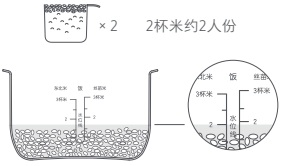


3. Set the menu

After the product is powered on, press down the pushbutton "Select", select a mode from "Super quick", "Regular" or "Congee".




4. Start to cook rice

Press down the pushbutton "Start" to enter the state of cooking rice.

Warning: "Super quick" and "Regular" are applicable to rice ONLY. It may cause scald and damage to product performance if you use the product for cooking other ingredients.




## Operating Guide

Switch the menu

Press down the pushbutton "Select" and select a mode you intend to use. Every time you press down the pushbutton, the recipes are switched over in the order of "Super quick", "Regular", "Congee", "Warm", and "APP".




1. Super quick

The " Super quick" mode is started by default. Its cooking duration is automatically adjusted according to the programs for different amounts of rice (it is expected to about 28min for 1 cup of rice, about 35min for 2 cups of rice, and about 40min for 3 cups of rice).




2. Regular

Its cooking duration is automatically adjusted according to the programs for different amounts of rice (it is expected to about 1hr).




3. Congee

The default cooking duration is 1.5hr for this mode.

Note: The cooking duration, ranging from 40min to 4hr, may be adjusted through zhiwuzhu APP.



4. Warm

After the cooking is completed, the product automatically enters the mode "Warm", to maintain the temperature at about 73℃. Or the mode "Warm" may be selected manually.

Note 1: It is recommended that the warming duration does not exceed 12hr. In case of more than 24hr, the mode "Warm" is automatically canceled and enters the mode "Standby";
Note 2: You may set whether to hold the temperature through zhiwuzhu APP after the cooking is completed;
Note 3: The product does not automatically enter the mode "Warm" for some modes selected in zhiwuzhu APP that are not suitable for holding the temperature (such as Baking Cake).




5. APP

zhiwuzhu APP recommends various cooking modes, and you may select one of them as a custom function for cooking through zhiwuzhu APP.

Note 1: The default function of APP is the Stewing mode when the product is delivered from the factory, and may be replaced or edited in zhiwuzhu APP.
Note 2: zhiwuzhu APP provides options for cooking functions such as Baking Cake.




6. Timer

1) After selecting the cooking mode "Regular", for example, press down the pushbutton "Timer" to set the reserved time for completing the cooking. For instance, if the meal is expected to be served in 2 hours, you need to set the reserved time to 02:00.

Note: A reservation is successful only when the duration from now to the reserved time of completion is longer than the cooking cycle of the selected mode; Otherwise, the product will start cooking immediately.







2) The initial timer interface displays the cooking time required by the selected mode. "Hour" blinks as the initial state. Every time you press the " + / −" pushbutton for duration adjustment, the timer duration increases or decreases by 1 hour. Press the "Timer" pushbutton again, and then the "Minute" blinks. Each time you press the "+/−" pushbutton for duration adjustment, the timer duration increases or decreases by 10 minutes. After confirming the reserved time, press down the "Start" pushbutton to start the reserved cooking.



## Troubleshooting

| Fault | Cause & Solution |
|---|---|
| The upper lid can't be closed. | Check whether the inner lid is installed. |
| Button doesn't work. | Check whether the cooker is in the mode cooking, "TIMER" or "WARM", and press down the button "SELECT/CANCEL" to exit if yes. |
| Steam leaks. | Check whether any rubber sealing part ages or is deformed or damaged. |
| Rice is half cooked (not fully cooked). | Check whether the rice-to-water ratio matches with the water line indicated. (Water is insufficient.) |
| | Check whether the production date of rice exceeds 6 months. |
| | Check whether there is foreign body on the contacting surface between the bottom of the inner pot and the top of the sensor. |
| | Check whether the surface of the aluminum cover for the pot bottom sensor is deformed. |
| Overflows during cooking. | Check whether the bottom of the inner pot is deformed. |
| | Check whether the rice-to-water ratio matches with the water level indicated. (Water is excessive.) |
| | Check whether there is foreign body on the contacting surface between the bottom of the inner pot and the top of the sensor. |
| | Check whether the surface of the aluminum cover for the pot bottom sensor is deformed. |
| Cooked rice is in lump. | Check whether the bottom of the inner pot is deformed. |
| | Check whether the rice-to-water ratio matches with the water level indicated. (Water is excessive.) |
| | Check whether the temperature holding time exceeds 12h. |
| There is bad smell during cooking. | Check whether there is food or water left on the inner lid from last cooking. |
| | Check whether there is bad smell from the sealing ring of the inner lid. |
| | Before starting the product for the first time, boil water 2 to 3 times with the mode "REGULAR", 40min each time, to reduce bad smell effectively. |
| The bottom of cooked rice is brown. | Ensure that rice is cleaned properly before cooking. |
| | Check whether there is foreign body on the contacting surface between the bottom of the inner pot and the top of the sensor. |
| | Check whether the surface of the aluminum cover for the pot bottom sensor is deformed. |
| | Check whether the bottom of the inner pot is deformed. |
| Cooked rice becomes hard or there is bad smell during "WARM". | Check whether the temperature holding time exceeds 12h. |
| | Check whether there is foreign body on the contacting surface between the bottom of the inner pot and the top of the sensor. |
| | Check whether the surface of the aluminum cover for the pot bottom sensor is deformed. |
| | Check whether the bottom of the inner pot is deformed. |
| "TIMER" doesn't work as required. | Check whether the time from now to the reserved time of completion is shorter than the cooking cycle of the mode selected; |
| | Check whether the button "START" is not pressed down after the reservation time is set. |
| | Check whether Wi-Fi linkage is normal when reservation is set on mobile phone. |
| Wi-Fi linkage fails. | Check whether the version of APP is the latest version. |
| | Check whether the Wi-Fi intensity is strong enough. |
| Firmware can't be upgraded. | Check whether the rice cooker is in the cooking process. |
| | Check whether Wi-Fi connection is normal. |

## Fault Code

| Code | Description | Remark |
|---|---|---|
| E-09 | The top sensor is damaged | Please contact the specific after-sales service for repair |
| E-10 | The bottom sensor is damaged | Please contact the specific after-sales service for repair |
| E-11 | Communication fault | Please contact the specific after-sales service for repair |

## Basic Parameter

| | | | |
|---|---|---|---|
| Product Name | Rice Cooker | Product Model | ZCDQ060 |
| Heating Way | Electric Heating Plate | Material of Inner Pot | Aluminium Alloy |
| Rated Voltage | 220V~ | Rated Power | 350W |
| Rated Frequency | 50Hz | Capacity | 1.6L |
| Dimensions | 239 × 210 × 186mm (L×W×H) | Wireless Connectivity: Wi-Fi IEEE 802.11b/g/n 2.4GHz | |

## After-sale Service

Please visit the official website at http://tokitglobal.com,if you need after-sales service or other information, or encounter any problem.

若有售后服务需求，请拨打服务电话：400-837-5577

制造商：纯米科技（上海）股份有限公司

地址：上海临港长兴科技园江南大道1333弄11号楼

执行标准：GB 4706.1-2005，GB 4706.14-2008，GB 12021.6-2017
GB 4706.19-2008，GB 4343.1-2018，GB 17625.1-2012

Manufacturer: Chunmi Technology (Shanghai) Co., Ltd.
Address: Building 11, 1333 Jiangnan Avenue, Changxing Science and Technology Park, Lingang, Shanghai




产品所含食品用塑料工具由
佛山市顺德区天惠塑料电器
制造有限公司
生产许可证编号：
粤XK16-204-04236