
joyami

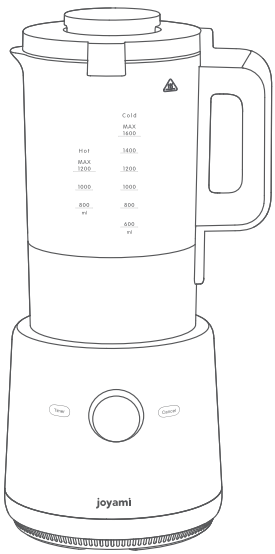

joyami Smart Blender
取扱説明書

製品をご使用になる前に、本取扱説明書をよくお読みになり、適切に保管して下さい

重要的保障措施

電気製品の使用には、次のような基本的な安全対策に常に従うこと：

- すべての説明をお読みになってください。
- 感電の危険を防止するため、電源コード、プラグ、携帯機器を水や他の液体に入れないでください。
- 本機器は、安全を見守る人から厳しく監督して、機器の使用に指導する場合以外、身体的、感覚的、または精神的能力が低下している、または経験と知識が不足している人（子供を含む）の使用には適していません。子供が電気製品を使用したり、子供に近づいたりするときは、厳しく監督しなければなりません。子供が本機器を操作しないように監督してください。
- 使用しない場合、部品を組み立てるまたは取り外す前、およびクリーニングする前に、機器の電源を切り、コンセントからプラグを外してください。プラグを抜くには、プラグをつかんでコンセントから抜いてください。電源ケーブルを引っ張らないでください。
- 可動部分に触れないようにしてください。
- 破損した電源ケーブルやプラグの使用、或いは機器が故障、落下または何らかの方法で破損した後に機器を操作しないでください。点検、修理、または調整については、メーカーのカスタマーサービス電話番号に電話してください。
- 従業員への傷害のリスクがあるため、メーカーが推奨していない添付ファイルを使用しないようにお願いいたします。

- 屋外では本製品を使用しないでください。本製品は家庭用のみであります。
- 電源コードをテーブルやテーブルの縁にぶら下げたり、高温表面に接触させたりしないでください。
- 高温ガスストーブや電気ストーブの上や近くに本製品を置かないように、または加熱したオーブンにも入れないでください。
- 大変な負傷や調理機の損傷のリスクを軽減のため、撹拌中、手や器具を混合カップに接触させないでください。撹拌機が動作していない場合にのみ、スクレーパを使用することができます（電気機器本体に組み込まれたスクレーパには適用されません）。
- ブレードが鋭いので、気をつけてお持ってください。
- 調理機は蓋をしてからしか操作できません。
- 高温の液体を処理、または加熱方法で動作させるとき、2 枚のキャップの中央部分を外してください。
- 部品の組み立てや取り外し、または本製品を洗浄する前に、冷却を待つ必要があります。
- 高温になる可能性のある表面には触れないでください。提供されたグリップまたはハンドルをご使用してください。
- 本製品を使用しない場合、部品を取り外す前、またはクリーニングする前に、プラグをコンセントから抜いてください本製品を置く前に冷却しておく必要があります。
- 熱油や他の高温液体を含む電気機器を移動する際は、非常に注意しなければならない。

- 適用可能な場合は、プラグを製品に常時接続し、電源コードを壁ソケットに差し込む前に、制御スイッチが OFF になるまでチェックしてください。接続を切断するには、制御スイッチを OFF 位置にしてコンセントからプラグを抜きます。
- 本製品を目的以外に使用しないでください。
- 移動部材に接触しないでください。

これらの説明を保存してください

清潔とメンテナンス

- joyami Smart Blender を水に浸したり、水をかけたりしないでください。
- ワイヤボールやその他の硬いものを使用して発熱ディスクを清潔しないでください。
- 柔らかい布ブロックのみを使用して joyami Smart Blender を清潔してください。
- joyami Smart Blender を長時間使用しない場合は、電源を切断し、湿気、防塵、防虫の適切な措置を取ってください。
- 電源が切断され、混合カップが冷却されてから清掃作業を開始することを確認してください。
- joyami Smart Blender デスクトップの油汚れを定期的に清潔にしてください。
- 混合カップの内部と部品の表面を水で洗い流してから拭き取ってください。撹拌ブレードは非常に鋭利なので、清潔する際に、傷がつかないように注意してください。

電源使用上の注意事項

- 火災や電気ショックの危険を回避するために、120 V 以外の電源を使用しないでください。
- 火災や電気ショックの危険を避けるために、プラグを手でつかんで電線を抜いてください。
- けがや電気ショックの危険を防ぐために、濡れた手で電線を引き抜かないでください。
- 最小定格電流が 10 A のソケットのみを使用してください。
- 電線に損傷や破裂がある場合は、安全上の危険を防ぐために、必ずメーカーまたはアフターサービス部門が交換してください。

- joyami Smart Blender を修理する際は、メーカーやアフターサービス部門の承認のない他の電線延長装置や部品を使用しないでください。
- 火災の危険を防ぐために、不良なプラグボードを使用しないでください。
- 提供される本体ホルダのみで joyami Smart Blender を使用してください。
- joyami Smart Blender を清潔、組み立てる、または取り外す前に、および joyami Smart Blender を使用した後に、必ず電源を切断にしてください。
- joyami Smart Blender の本体ホルダを移動する前に、電源が切断されることを確認してください。


使用中


- 水があふれたり噴き出したりして、やけどやその他の事故を引き起こすことがありため、最大水位を超える水の量を入れないでください。
- joyami Smart Blender の空転や過負荷が厳禁されます。
- 使用中に joyami Smart Blender を移動したり、作業部品に接触したりしないでください。
- 混合カップに食材や水が入っていない状態で加熱操作をしないでください。
- 使用中にカップキャップとフィードキャップを移動しないでください。
- プラグを液体に接触させないでください。
- 加熱アセンブリの作業が終了しても余熱が残る可能性があります。
- 加熱中は混合カップとカップキャップ表面が高温になる可能性があるので、使用中は混合カップとカップキャップ表面に触れないでください。

環境について

- 蒸気や熱により壁や家具が損傷、変色、変形することがありますので、壁や家具から 30 cm 以上離れた状態で使用してください。
- キャビネットや同様の場所で joyami Smart Blender を使用する場合は、周囲の風通しが良いことを確認してください。

製品紹介

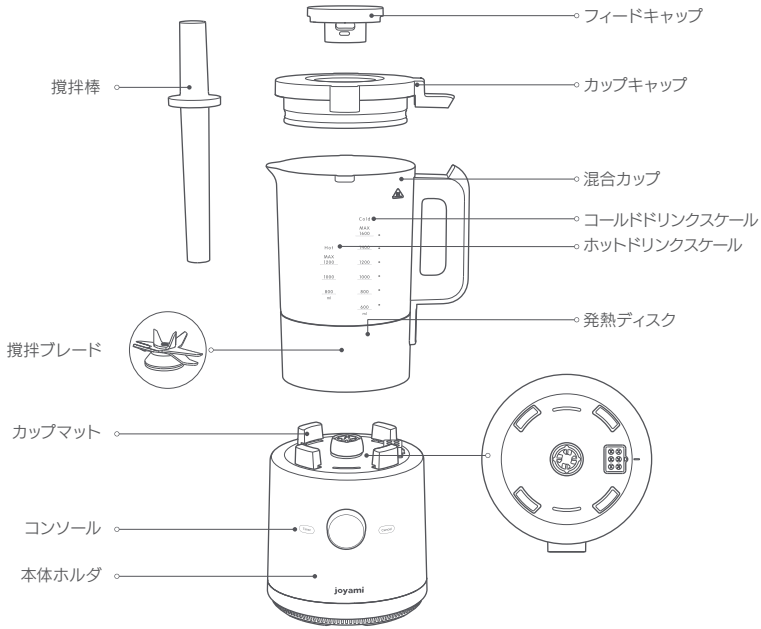

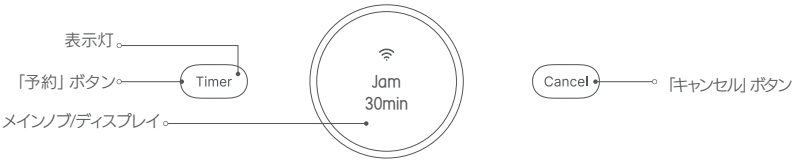

パーツリスト


攪拌棒 x 1


ブラシ x 1


計量カップ x 1

注：説明書の製品、部品、ユーザーインタフェースなどのイラストはすべて見取り図で、参考にしてください。製品の更新とアップグレードのため、製品の実物と見取り図は少し異なるかもしれませんが、実物を基準にしてください。

使用

初回使用

最初に電源を投入する時、ウォールブレイカーはWi-Fi設置インターフェースに入り、メインノブを押して、Wi-Fi接続/切断を選択して、この時メインノブを回転してWi-Fi接続または切断を選択でき、メインノブをクリックしてPress&Hold to startインタフェースに戻ると、使用ができるようになります、30 s操作がなければ自動的にデフォルトで「No」（WiFi未接続）になります。



オン/オフと一時停止

1. 電源を入れる

電源を投入するたびに画面に「Press&Hold to start」が表示され、メインノブを2秒長く押した後にjoyami Smart Blenderが起動し、電源を投入して初めて電源を入れると、最初のレシピが表示されます。スタンバイ状態では、10分間何の操作もなければ、画面はAlways on Display（AOD）状態になります。



2. シャットダウン

Press&Hold to cleanモード以外に、任意の動作状態でメインノブを2秒間長く押した後、機器をシャットダウンします。非動作状態（スタンバイ、カップ、キャップ開け）で10分間何の操作もなければ、画面はAlways on Display（AOD）状態になります。

3. 一時停止

動作状態では、メインノブを1回押すと、機器は動作を一時停止し、メインノブを再度押すと、機器が前の設定で動作を続行します。

注：メニュー機能によって、一時停止には異なるデフォルト時間（ホット2分、コールド1分）があります。一時停止状態はカウントダウンモードであります。



Mi Home APPへの接続

本製品はすでに米家にアクセスしており、Mi Home APPで操作し、他の製品と相互接続することができます。

QRコードをスキャンし、Mi Home APPをダウンロードしてインストールします。Mi Home APPをインストールしたユーザーは、機器の接続ページに直接アクセスできます。または、アプリストアで「Mi Home」を検索し、Mi Homeアプリをダウンロードしてインストールします。Mi Home APPのトップページを開き、ページ右上にある「+」をクリックし、APPの提示方法に従って機器を追加します。

ヒント：Mi Home APPのバージョンが更新されている可能性がありますので、現在のAPPのバージョンに応じた指示に操作してください。


Wi-Fi状態

動作モード	状態表示
未接続	Wi-Fiアイコン点滅
接続成功	Wi-Fi アイコン持続点灯


注：Wi-Fiが接続されていない場合、Wi-Fiアイコンが点滅します。

操作ガイド


1. joyami Smart Blenderを取り出し、フィードキャップ、カップキャップ、及び撹拌棒を清潔にし、本体ホルダの外部は固く絞った布で拭くことができ、本体ホルダ、撹拌棒、電線などすべての作業用電気部品を浸漬してはならず、本体ホルダ及び混合カップの底部などの電子機器を含む部品を直接水掛してはなりません。

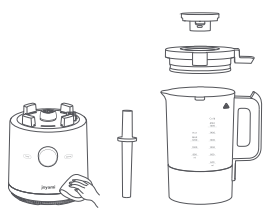


2. 調理する食材をきれいに洗い、3センチ角に切り、混合カップに入れます。

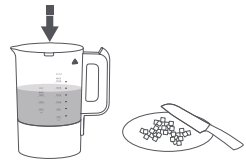


3. フィードキャップをカップキャップに取り付け、カップキャップを時計回りに回転させ、混合カップに固定してロックします。

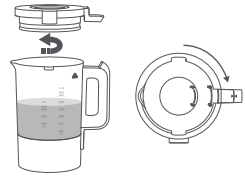

4. 混合カップを本体ホルダに正しく置き、ハンドルの下の小さな三角形を本体ホルダに線を合わせます。必ず本体ホルダを定常平面上に置いてください。

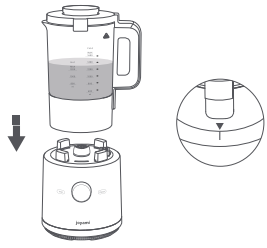

5. 通電後にメインノブを回転調節することで機能切り替えができ、必要な機能に切り替わって、メインノブを押して調理状態に入ります。

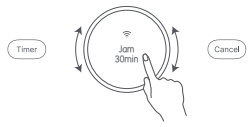

保守とメンテナンス

清潔

1. 余熱やけどに注意して、混合カップが十分に冷めてから清潔してください。

2.混合カップを飲み物の作製後、冷やして注ぎ出してから、すぐに清水を加え、「Press&Hold to clean」モードの複数の使用によって、混合カップをよりよく洗うことができます。

3.電源を切断した後、本体ホルダの外部は固く絞った布で拭くことができ、本体ホルダ、混合カップ、電線などの作業中に電気を使うすべての部品を浸漬してはなりません。本体ホルダや混合カップの底部など、電子機器を含む部品を直接水掛してはなりません。

4.洗浄する時、混合カップの内部と部品を清水で洗浄し、乾燥してください。混合ブレードは非常に鋭利で、切創しないように洗浄時にブレードに注意してください。

5.joyami Smart Blenderを研磨性洗浄剤や腐食性液体（ガソリンやアセトンなど）で洗浄しないでください。

6.例えば、部品が野菜ジュースなどの飲み物で染色される場合、洗浄前に食用油を適宜数滴加えて拭き取ることができ、染色をよりよく除去することができます。部品を水で洗い流した後、乾かしてください。

7.混合カップ内の残留物が除去しにくい硬い塊になった場合は、適量の水を加えて浸漬し、軟化した後、洗浄して乾かしてください。

8.発熱ディスクの底部が何度も洗浄されてきれいでない場合、底部に残留した付着層が蓄積されている場合、清水にしばらく浸してから、布に白酢をつけて、軽く拭き、拭く時に刃に注意して、切り傷をしないように洗浄してください。電源を入れてjoyami Smart Blenderを起動して拭かないでください。

メンテナンス

1. joyami Smart Blenderを、モータの乾燥を維持するためによく使用してください。

2. joyami Smart Blenderを長期間使用しない場合は、モーターが湿気を受けて使用に影響を与えないように、joyami Smart Blenderを乾燥通風所に保存してください。

機能説明

モード	操作方法
ジャム とろとろスープ キューブ入りスープ 豆乳	電源を入れて、メインノブに「ジャム」が表示され、メインノブを押してジャムを作成し始まるか、或いはメインノブを回してとろとろスープ、キューブ入りスープ、または豆乳を選択し、メインノブを押して選択した料理を作成し始めます。 注1：予約を許可し、調理後にデフォルトで保温になり、作業中に2分間停止して調理を再開しないと、自動的にキャンセルされます。 注2：作業開始後、メインノブを押すと一時停止し、再度メインノブを押すと作業が再開されます。作業が一時停止した場合は、キャンセルキーを押して作業を終了します。
スムージー 野菜ジュース ミルクシェーク	電源を入れると、メインノブに「ジャム」が表示され、メインノブを回して「スムージー」、「野菜ジュース」または「ミルクシェーク」を選択し、メインノブを押すと、選択した飲み物を作り始めます。 注1：予約不可で、調理再開せずに1分間調理を中断すると自動キャンセルとなります。 注2：作業開始後、メインノブを押すと一時停止し、再度メインノブを押すと作業が再開されます。作業が一時停止した場合は、キャンセルキーを押して作業を終了します。
点動/洗浄	電源を入れると、メインノブに「ジャム」が表示され、メインノブを「Press&Hold to clean」モードに回し、食材や清水を加えた後、メインノブを押したまま作業を行います。 注1：食品が完全に撹拌されていない場合は、再度短時間で撹拌して、「Press & Hold to clean」機能を選択します。 注2：洗浄するときは、「Press & Hold to clean」機能を選択します。

手動	電源を入れた後、メインノブに「ジャム」が表示され、メインノブを「手動」モードに切り替え、メインノブを押してからメインノブを回して速度を選択します。 注：作業を開始した後に、メインノブを押すと一時停止し、メインノブを再度押すと作業を続行できます。作業が一時停止した場合は、キャンセルキーを押して作業をキャンセルします。
設定	1. インターネット接続中に、、設定インタフェースでWi-Fiインタフェースに切り替え、メインノブを押して確定すると、Wi-Fi リセットと Wi-Fi 切断操作を実行できます。 2. ネットワークに接続されていない状態に、設定インタフェースでWi-Fiインタフェースに切り替え、メインノブを押して確認するとWi-Fi接続操作ができます。 注：Wi-Fi接続/切断操作の場合、30s操作がない場合はデフォルトで前回のオプションに設定され、設定インタフェースに戻ります。

レシピ

飲み物名	時間	食材量
ジャム	30分	ブルーベリー 300g、砂糖 120g、レモン汁 6g
スムージー	45秒	氷 300g（2cmサイズのブロック）
野菜ジュース	2分	ニンジン640 g、飲料水960 mL 注：joyami Smart Blenderが果物と野菜のジュースを連続的に撹拌する場合、各時間の作業時間は 2 分を超えてはならず、累積時間は 6 分を超えてはなりません。操作中、本体が過熱した場合は、約20分間停止させ、冷却後に操作を続けてください。
とろとろスープ	38分	じゃがいも 1本（約220g）、カシューナッツ 10g、しいたけ 50g、塩 2g、こしょう 適量、飲料水 720mL
キューブ入りスープ	35分	じゃがいも 1本（約220g）、カシューナッツ 10g、しいたけ 50g、塩 2g、こしょう 適量、飲料水 720mL
ミルクシェーク	1分	1pc red pitaya (about 400 g), 300 ml yoghurt, 5 ice cubes (2 cm in size), an appropriate amount of honey
豆乳	35分	大豆70g（計量カップの目盛りは約100ml）、ナツメヤシ3個、クコ10個、1000mlの目盛りまで水を加えます。 注：ジャム、豆乳、とろとろスープ、キューブ入りスープのみ事前予約可能です。他のレシピはこの機能に適用しません。
手動	30秒	「野菜ジュース」の例：にんじん940g、飲料水660mL 注：joyami Smart Blenderが果物と野菜のジュースを連続的に撹拌する場合、各時間の作業時間は 2 分を超えてはならず、累積時間は 6 分を超えてはなりません。操作中、本体が過熱した場合は、約20分間停止させ、冷却後に操作を続けてください。

注: ジャム、とろとろスープ、キューブ入りスープ、豆乳メニューは予約機能に対応しており、その他のメニューは予約機能に対応していません。

故障コード

コード	表示内容	意味	対処方法
E01	モータ過負荷	モーター過負荷	電源を切ってからカップ本体内の食材を片付け、joyami Smart Blenderが冷えるのを待ってから電源を入れ直してください
E02	カップ本体を置いてください	カップ本体が置かれていません	カップ本体を置いて終了します
	カップキャップを置いてください	カップキャップが置かれていません	カップキャップを置いて終了します
E05	温度が高すぎる	底部温度センサー高温警報	温度が下がったら自動復帰、キャンセルボタンを押すと待機状態に入ります
E10	温度センサ故障	底面温度センサー オープン/ショート	故障回復できません
E11	通信異常	電源基板と表示基板の間が通信異常しています	故障回復できません

故障シューティング

故障現象	故障シューティング
オーバーフロー	·適切な量の食材を入れます ·正しい水位まで水を入れてください ·説明書に従って機能モードを選択します ·アフターサービスにご連絡ください
焦げています	·適切な量の食材を入れます ·小麦粉など極端にドロドロしたものを入れてはいけません ·正しい水位まで水を入れてください ·使用前に、洗浄してください ·説明書に従って機能モードを選択します ·アフターサービスにご連絡ください
食材をかき混ぜれません	·適切な量の食材を入れます ·正しい水位まで水を入れてください ·説明書に従って機能モードを選択します ·アフターサービスにご連絡ください

動作が終了後も、食材が熱くなりません	·説明書に従って機能モードを選択します ·アフターサービスにご連絡ください
ディスプレイが点灯しません	·ワイヤをチェックし、プラグがしっかり差し込まれ、電源が入っていることを確認します ·アフターサービスにご連絡ください
ディスプレイはオンになっていますが、機器が動作しません	·再度機能を選択し、機能を確認後ディスプレイを押して起動します ·正しい水位まで水を入れて、冷却後に再起動してください ·最初に電源プラグを抜き、次に電源を入れ、通常の作業手順に従って操作します ·アフターサービスにご連絡ください
作業騒音があります	·モーター攪拌音は正常であります ·アフターサービスにご連絡ください

注 1: 電源がしっかりと接続されていること、および混合カップとカップキャップが所定の位置にあることを確認してください。 joyami Smart Blenderに異音、異臭、煙などの異常が発生した場合は、すぐに電源を切り、使用を中止してください。
注 2: 上記の点検を行っても、joyami Smart Blender機が正常に動作しない場合は、アフターサービスにご連絡ください。

基本パラメータ


品名	Smart Blender	商品型式	JDD03M
定格電圧	100V	定格周波数	50-60Hz
撹拌力	600W	加熱力	500W
コールドドリンク最大容量	1600mL	ホットドリンク最大容量	1200mL
製品仕様	188×222×436mm		

アフターサービス

アフターサービスやその他の情報が必要な場合、または問題が発生した場合は、http://www.joyami.com にログオンしてください。

製造業者：Chunmi Technology (Shanghai) Co., Ltd.
所在地：Building 11, 1333 Jiangnan Avenue, Changxing Science and Technology Park, Lingang,201203 Shanghai, PEOPLE'S REPUBLIC OF CHINA

joyami

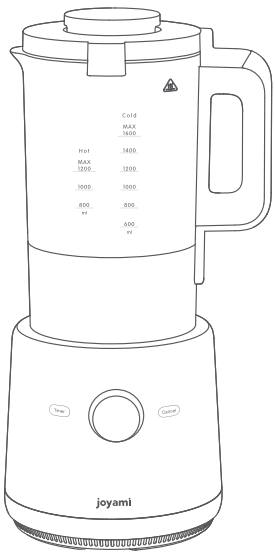

joyami Smart Blender
Operation Manual

Please read this operation manual carefully before starting the product, and save it properly for future use.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- To protect against risk of electrical shock do not put cord, plugs, portable appliances in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.

- The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to p ersons.
- Do not use outdoors. Household Use Only.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running (does not apply to an acceptable scraper integral with the appliance).
- Blades are sharp. Handle carefully.
- Always operate blender with cover in place.
- When blending hot liquids or operating in the heating mode, remove center piece of two-piece cover.
- Allow to cool before assembling or disassembling parts and before cleaning the appliance.
- Do not touch surfaces that may be hot. Use handles or knobs provided.
- Remove plug from outlet when the appliance is not in use, before putting on or taking off parts, and before cleaning. Allow to cool before handling.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Where applicable, always attach plug to appliance and check that the control is OFF before plugging cord into wall outlet. To disconnect, turn the control to OFF, then remove plug from all outlet.

- Do not use appliance for other than intended use.
- Avoid contacting moving parts.

SAVE THESE INSTRUCTIONS

Cleaning & maintenance

- Do not immerse the blender in water or splash it with water.
- Do not use steel wool or other hard objects to clean the heating plate.
- Use only soft cloths for cleaning.
- If the blender will not be used for an extended period of time, unplug the power cord and take appropriate measures to protect the blender from moisture, dust, and household pests.
- Ensure that the power cord is disconnected and wait until the jar cools down before cleaning.
- The table surface the blender is placed on must be regularly cleaned of grease.
- Please rinse the jar's interior and accessories with clean water before wiping them dry. The blades are sharp, so please be careful when cleaning toavoid injury emptying the bow.

Precautions on Electric Power

- Do not use any power supply other than 120V to avoid fire and electrical shocks.
- Always unplug the blender by holding the powerplug to avoid fire or electrical shocks.
- Do not plug or unplug the power cord when your hands are wet to avoid injury and electrical shocks.
- Use only power sockets with a rated current above 10 A.

- If the power cord is damaged or broken, it must be replaced by the manufacturer or after-sales service department to avoid safety hazards.
- Do not use other power cord extenders or parts not approved by manufacturer or maintenance department when repairing.
- To avoid the risk of fire, do not use low-quality power strips with this product.
- Only use the blender on the base provided.
- Always unplug the blender before cleaning, assembling or disassembling, or after useing.
- Make sure that the blender is powered off before moving the base.


In Use


- Do not add water over the maximum level, or else the water will overflow or spray out and cause burns or other accidents.
- Idling or overloading is strictly prohibited.
- Do not move the blender or touch any running parts when in use to avoid accidents.
- Do not heat without any food or water inside.
- Do not move the lid and lid plug when in use.
- Do not allow any liquid to get on the pin connector.
- There will be residual heat after heating element works.
- The surface of the jar and lid will be hot while heating, so please do not touch them while in use.

Environment

- Steam and heat may damage, discolor or deform your walls and furniture, so keep the product preferably during use 30 cm away from any walls and furniture.
- When using the blender in a kitchen cabinet, etc., please ensure that the place is well ventilated.

Product Description

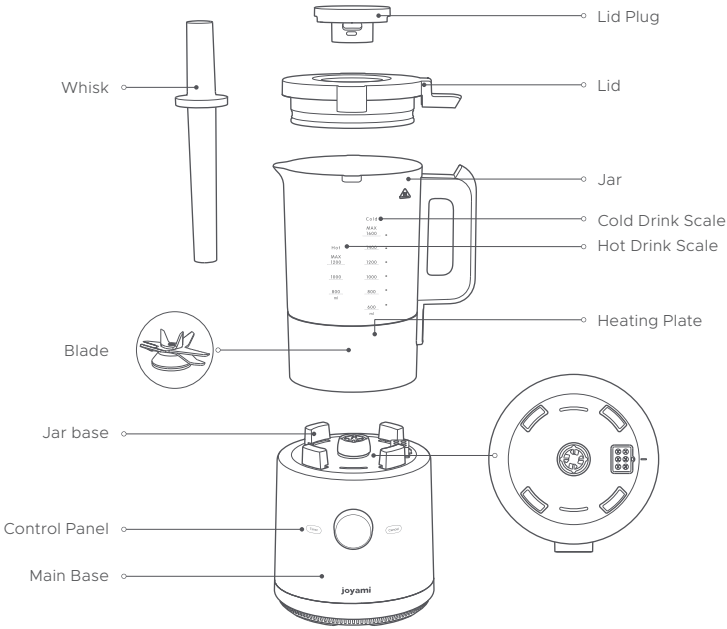

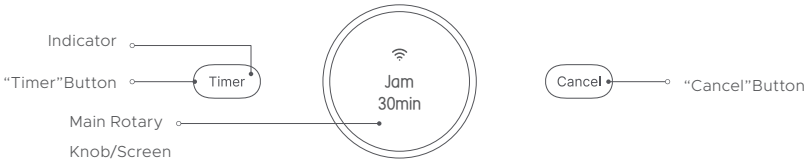

Accessories


Whisk x 1


Brush x 1


Measuring Cup x 1

Tip: The illustrations of product, component and user interface are all schematic diagrams for reference only in the manual.
Due to possible upgrade of the product, there may be differences between the actual product and the schematic diagram included herein. The actual product shall prevail.

About Use

Start to Use

When joyami Smart Blender is powered on for the first time, it enters the Wi-Fi setting interface. Press the main rotary knob and select Enable/Disable Wi-Fi. At this moment, rotate the main rotary knob to Enable or Disable Wi-Fi, press the main rotary knob to confirm and return to "Press & hold to start" interface to start the blender. If no operation is made for 30sec, the default result will be "No" (Wi-Fi is disabled).



Turn ON/OFF and Pause

1. Turn On

Every time joyami Smart Blender is powered on, the screen will display "Press & hold to start". At this moment, press and hold the main rotary knob for 2 sec to turn on the device. The first mode will be displayed when joyami Smart Blender is powered on and turned on for the first time. In the standby state, if no operation is made for 10min, the screen will enter the Always on Display (AOD) state.



2. Turn Off

joyami Smart Blender may be turned off after the main rotary knob is pressed and held for 2sec in any state, except in the Press & hold to clean mode. In the non-working state (standby, lifting jar, and opening jar plug), if no operation is made for 10min, the screen will enter the Always on Display (AOD) state.

3. Pause

In the working state, if the main rotary knob is pressed once, joyami Smart Blender will pause working; if the main rotary knob is pressed again, it will resume working as set in the last operation.

Tip: Depending on functions, joyami Smart Blender has different default pause durations, namely, 2 min for hot drinks and 1 min for cold drinks. The pause state is in the countdown mode.



Connect with Mi Home App

This product works with Mi Home app. Control your device, and interact it and other smart home devices with Mi Home app.

Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search "Mi Home" in the app Store to download and install it.

Open Mi Home app, tap "+" on the upper right, and then follow prompts to add your device.

Tip: The version of Mi Home app might have been updated, please follow the instructions based on the current app version.


Wi-Fi Status

Operation Mode	Status Display
Wi-Fi is disabled	The Wi-Fi icon is blinking
Wi-Fi is enabled	The Wi-Fi icon stays on


Tip: When Wi-Fi is disabled, the Wi-Fi icon is in the blinking state.

Operating Guide


1. Take out joyami Smart Blender, clean the lid plug, lid and whisk with water, and the outside surface of the main base with soft wet cloth. Do not immerse any working electrical components such as the main base, jar, and power cord in water, not spay water on any part containing electric component such as the main base and jar base.

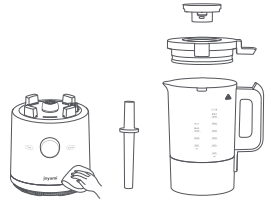


2. Clean the ingredients, cut them into 3cm chunks and put the chunks in the jar.

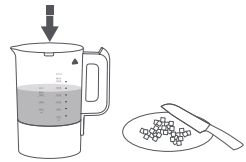


3. Install the lid plug on the lid, turn the lid clockwise and lock it with the jar tightly.

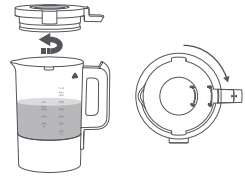

4. Place the jar correctly on the main base, and align the small triangle below the handle with the alignment line on the main base. Make sure to place the main base on a table surface.

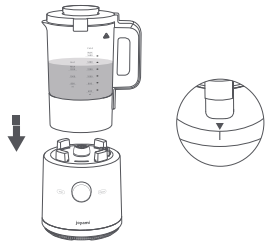

5. After powering on joyami Smart Blender, rotate the main rotary knob to switch over its functions. When switching to the required function, press the main rotary knob to enter the cooking state.

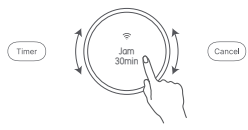

Cleaning & Maintenance

Cleaning

1. Be careful of scald caused by residual heat. Please wait until the jar fully cools before cleaning.
2. After the drink is made, cools and is poured out, please immediately add clean water in the jar and operate the "Press & hold to clean" mode for several times to clean the jar better.
3. After powering off joyami Smart Blender, clean the outside surface of the main base with soft wet cloth. Do not immerse any working electrical components such as the main base, jar, and power cord in water. Dot not spay water on any part containing electric component such as the main base and jar base.
4. When cleaning, rinse the jar interior and accessories with clean water, and wipe off residual water. The blades are very sharp. Be careful with the blades to avoid cuts during cleaning.
5. Do not use abrasive detergent or corrosive liquid (such as gasoline and acetone) to clean the device.
6. If any part of joyami Smart Blender is strained by fruit/vegetable juice or other drinks, add

several drops of edible oil to wipe the strains before rinsing it with clean water to better remove the stains. Please wipe off residual water after rinsing any parts with clean water.

7. If any residues in the jar form a hard block that is difficult to remove, please add an appropriate amount of water to soak it first, and then rinse and wipe it off after it is softened.
8. When the bottom of the heating plate is not clean after several times of cleaning and accumulated with any residual adhesive layer on it, soak the bottom with clean water for a period of time, then dip white vinegar with soft cloth, and gently wipe the bottom with the cloth. Be careful of the blades so as to avoid cuts when wiping them. Do not wipe the device after it is powered on.

Maintenance

1. joyami Smart Blender should be used frequently to keep its motor dry.
2. If the device is not used for a long time, please keep it in a dry and ventilated place to prevent the motor from being affected by moisture.

Function Instruction

Mode	Operating Method
Jam Smooth soup Chunky soup Soy milk	After turning on the device, the main rotary knob displays "Jam". Press the main rotary knob to start making jam, or rotate the main rotary knob to select Smooth soup, Chunky soup or Soy milk, press the main rotary to start making the chosen one. Tip 1: You may select a Timer program. joyami Smart Blender will keep warm by default after the cooking program is completed. If cooking is paused and not resumed after 2 min during the working period, the cooking program will be canceled automatically. Tip 2: After the device starts working, if the main rotary knob is pressed, it will pause the cooking, and if pressed again, it will resume the cooking. After the cooking is paused, if the Cancel button is pressed, the device will exit from the cooking.
Smoothie Fruit & vegetable juice Milkshake	After turning on the device, the main rotary knob displays "Jam". Rotate the main rotary knob to select “Smoothie”, “Fruit & vegetable juice” or “Milkshake”, and press the main rotary knob to start making the chosen drink. Tip 1: You are not allowed to select a Timer program. The device will cancel the cooking program automatically if cooking is paused and not resumed after 1 min during the working period. Tip 2: After the device starts working, if the main rotary knob is pressed, it will pause the operation, and if pressed again, it will resume the operation. After the operation is paused, if the Cancel button is pressed, the device will exit from the operation.
Press & hold to clean	After turning on the device, the main rotary knob displays "Jam". Rotate the main rotary knob to select the “Press & hold to clean” mode, add the ingredients or clean water in the jar, press the main rotary knob to start operating the chosen operation. Tip 1: If ingredient is not fully blended, select "Press & hold to clean" function to blend for a short time again. Tip 2: Select "Press & hold to clean" function to clean the jar.

Manual	After turning on joyami Smart Blender, the main rotary knob displays "Jam". Rotate the main rotary knob to select the “Manual “mode, press the main rotary knob, and then rotate the main rotary knob to select a revolving speed. Tip: After the device starts working, if the main rotary knob is pressed, it will pause the operation, and if pressed again, it will resume the operation. After the operation is paused, if the Cancel button is pressed, the device will exit from the operation.
Settings	1. If Wi-Fi is enabled in joyami Smart Blender, rotate the main rotary knob to select the Wi-Fi interface on the Settings screen, and press the main rotary knob to reset or disable Wi-Fi. 2. If Wi-Fi is disabled in joyami Smart Blender, rotate the main rotary knob to select the Wi-Fi interface on the Settings screen, and press the main rotary knob to enable Wi-Fi. Tip: During the enabling or disabling Wi-Fi process, if no operation is made for 30 sec, the last option is chosen and back to the Setting interface by default.

Recipe

Drink Name	Time	Ingredient Quantity
Jam	30min	300 g blueberry,120 g white granulated sugar, 6 g lemon juice
Smoothie	45sec	300 g ice cubes (2 cm cube in size)
Fruit & vegetable juice	2min	640 g carrot, 960 ml water Tip: When using joyami Smart Blender for continuously making fruit & vegetable juice, the working time should not exceed 2 min each time, and the total working time should not exceed 6 min. During the operation, if the main base is overheated, stop the operation for about 20 min, and resume it after the main base cools down.
Smooth soup	38min	1pc potato (about 220 g), 10 g cashew nut, 50 g white mushroom, 2 g salt, an appropriate amount of white pepper powder, 720 ml water
Chunky soup	35min	1pc potato (about 220g), 10 g cashew nut, 50 g white mushroom, 2 g salt, an appropriate amount of white pepper powder, 720 ml water
Milkshake	1min	1pc red pitaya (about 400 g), 300 ml yoghurt, 5 ice cubes (2 cm in size), an appropriate amount of honey
Soy milk	35min	Soybeans 70 g (about 100 ml mark on the measuring cup), 3 red dates and 10 wolfberries with water added to the 1000 ml mark Note: Only jam, soy milk, smooth soup, and chunky soup are available for scheduling in advance. Other recipes do not support this function.
Manual	30sec	For example, for Fruit & vegetable juice, 940 g carrot, 660 ml water Tip: When using joyami Smart Blender for continuously making fruit & vegetable juice, the working time should not exceed 2 min each time, and the total working time should not exceed 6 min. During the operation, if the main base is overheated, stop the operation for about 20 min, and resume it after the main base cools down.

Cautions:
Only Jam, Smooth soup, Chunky soup and Soy milk are available for scheduling in advance. Other recipes do not support this function.

Fault Code

Code	Contents Displayed	Meaning	Solution
E01	Motor overloaded	Motor overloaded	After power off the device, remove the food in the jar, wait until the device cools down, then power it on and start again
E02	Place the jar	No jar is placed	Exit after placing the jar
	Place the lid	No lid is placed	Exit after placing the lid
E05	Overheated	The bottom temperature sensor gives a high-temperature alarm	The device will resume the program automatically when the temperature drops, and at this moment press the Cancel button to enter the standby state
E10	Temperature sensor error	The bottom temperature sensor is open-/short-circuited	Fault is not repairable
E11	Communication error	Communication is abnormal between the power supply board and the display board	Fault is not repairable

Troubleshooting

Fault Phenomenon	Troubleshooting
Overflow	· Add an appropriate amount of ingredients · Add water until it reaches the correct water level line · Select a mode as instructed herein · Contact after-sales service
Burning on the bottom	· Add an appropriate amount of ingredients · Do not add flour or other ingredients building up and causing serious burning on the bottom · Add water until it reaches the correct water level line · Wash and clean the jar thoroughly before use · Select a mode as instructed herein · Contact after-sales service
Ingredients is not cut fully	· Add an appropriate amount of ingredients · Add water until it reaches the correct water level line · Select a mode as instructed herein · Contact after-sales service

Food is not hot when the program is completed	· Select a mode as instructed herein · Contact after-sales service
The display screen is not on	· Check whether the power cord is proper and make sure it is plugged and powered on correctly · Contact after-sales servic
The display screen is on, but the device doesn't work	· Re-select and confirm a mode, and press the screen to start the device · Add water until it reaches the correct water level line, wait until the device cools, and then restart the device · Unplug the power cord, then plug it again and operate the steps as normal · Contact after-sales service
Work noise	· Blending sound from the motor is a normal phenomenon · Contact after-sales service

Tip 1: Check whether the power supply is connected properly and whether the jar and lid are installed in place. In case of an abnormal situation such as abnormal noise, smell, and smoke, immediately power off and stop the device.
Tip 2: If the device does not work properly even after the inspections above, please contact after-sales service.

Basic Parameter

Product Name	Smart Blender	Product Model	JDD03M
Rated Voltage	100V	Rated Frequency	50-60Hz
Blending Power	600W	Heating Power	500W
Max. Cold Drink Capacity	1600mL	Max. Hot Drink Capacity	1200mL
Dimensions	188×222×436mm		

After-sale Service

Please visit the official website at https://www.joyami.com,if you need after-sales service or other information, or encounter any problem.

User Manual Version: V0.5
Maunfacturer: Chunmi Technology (Shanghai) Co., Ltd.
Address: Building 11, 1333 Jiangnan Avenue, Changxing Science and Technology Park, Lingang, 201203 Shanghai, PEOPLE'S REPUBLIC OF CHINA